


Cubico 2


Assembly Instructions

JAHN DESIGN


1. Use another board with the slots facing upwards in order to aid stability when assembling the unit.

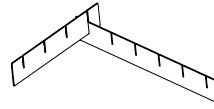



2. Place a board into each slot of the board, again with the slot facing upwards, and keep them parallel to each other.

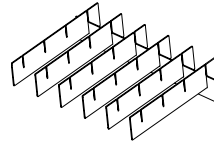


3. Fit the other boards, with the slots facing downwards, directly into the upward facing boards.

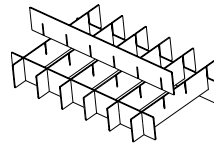


4. Attach the feet into pre-drilled holes on the front/lower side of the vertical boards. If you intend to place the shelf on a hard surface, stick the felt pads on a hard surface, stick the felt pads onto the feet. The felt pads are supplied with the unit.

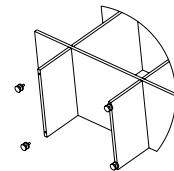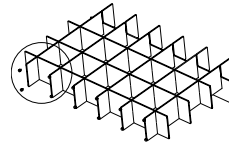


5. Stand the shelving unit on its feet.

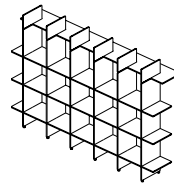


6. Remove the board you initially used to aid stability. Turn it around and push it correctly into the remaining slots.

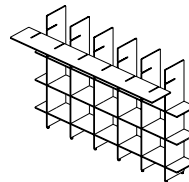

7. Place two of the supplied stiffening bars in a cross pattern, as pictured, onto the back side of the shelf. For easy of fitting we recommend that you first place the bar end with the fully seated cap before the end with the partially seated cap.

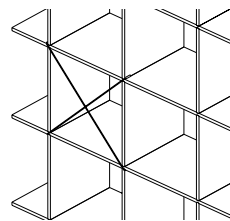

8. To level off the shelving unit on uneven surfaces, use the adjustable feet as required.

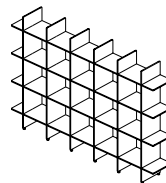


9. Cleaning can be done using a damp cloth.

Cubico 2


JAHN DESIGN

Assembly Instructions for shelves with longitudinal connections


1. Insert the connection piece into the pre-drilled holes at the front of the longitudinal boards and connect them together to produce one single board.

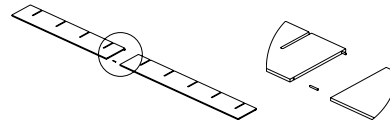


2. Use another single board with the slots facing upwards in order to aid stability when assembling the unit.

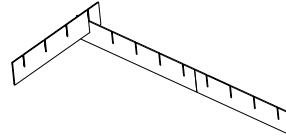



3. Place a smaller board into each slot of the longer board, again with the slot facing upwards, and keep them parallel to each other.

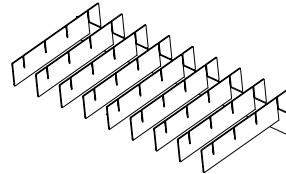


4. Take the other longer boards and place them into the upward facing slots of the smaller boards. Take care to push the boards firmly into the slots with equal pressure in order to ensure that the boards are correctly seated, therefore producing a stable unit.

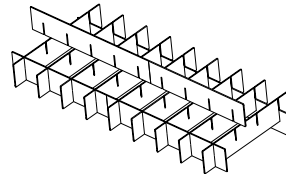

5. Attach the feet into the pre-drilled holes on the front/lower side of the smaller boards. If you intend to place the shelf on a hard surface, stick the felt pads onto the feet. The felt pads are supplied with the unit.

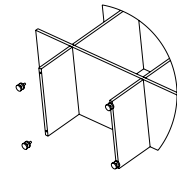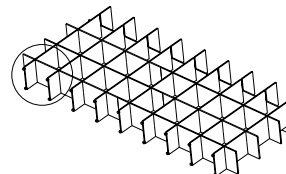


6. Stand the shelving unit on its feet.

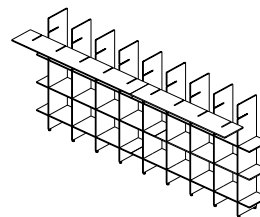


7. Remove the board you initially used to aid stability. Turn it around and push it correctly into the remaining slots.

8. Place two of the supplied stiffening bars in a cross pattern, as pictured, onto the back side of the shelf. For easy of fitting we recommend that you first place the bar end with the fully seated cap before the end with the partially seated cap.

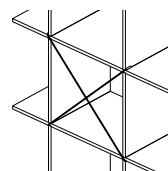

9. To level off the shelving unit on uneven surfaces, use the adjustable feet as required.

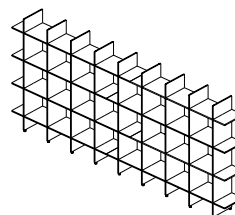

10. Cleaning can be done using a damp cloth.